



Instructions Firstwheels

Dear Parents,

We are happy to congratulate you on your Firstwheels purchase! Safety has been a very important aspect during the development of the Firstwheels strollers. Both the City Elite and the City Twin have been approved according to the following standards:

Europe	: BS EN 1888:2003 +A1, A2 and A3 amendment 2005
Canada	: SOR/85-379
Australia	: AS/NZS 2088-2000
UK	: BS 5852
Israel	: 891 - 2004

If you have any comments or enquiries about your Firstwheels please feel free to contact us at info@firstwheels.nl

IMPORTANT MESSAGE: Read these instructions carefully before use.

Not following these instructions correctly may endanger your child. Never leave children unattended in the Firstwheels stroller and always ensure supervision by an adult.

Always double check if the cot, the seat, or the adaptor set with car seat, has been locked and secured correctly before use. When using the stroller seat, always fasten your child in the 5-point safety belt, even when using the sleeping bag. For safety, we advise against running or skating behind the stroller.

Do not use the cot for babies heavier than 9 kgs / 20lbs. The seat is designed for children with a maximum weight of 15 kgs / 33lbs or to a maximum height of 100 cm / 39.37in. When using the adaptor with a car seat, do not exceed the maximum weight indicated on the car seat. The seat is changeable in 3 different positions; sitting, semi-reclining and reclining. It is recommended to use the cot for children from birth to 6 months.

The seat is safe to use when the child is able to sit unaided. At this point it is recommended to no longer use the cot. When (un)folding the stroller, be sure to keep children away from all moving parts. Do not let children climb into the stroller on their own. Always apply the brakes when not moving. The brakes are activated by pushing the pedal in between the back wheels down, and are released by pulling the same pedal up. Always hold the stroller when it is standing at an angle, even when the brakes are applied. For extra safety, use the wristband. Never use the stroller on stairs or escalators. The stroller may topple when heavy bags are hung onto it. Check your stroller regularly and only use accessories and parts recommended by the manufacturer.

Maintenance

Clean the fabric with lukewarm water and soap. Rinse with fresh water and leave to dry. Never use bleach or chemical detergents. Periodically (approximately once a month) grease the wheels and metal parts to ensure the stroller continues to run smoothly. Rinse the wheels when necessary to remove any road dirt or salt.

Warranty

The 12-month warranty period commences on the day of purchase. The warranty covers manufacturing faults and only upon presentation of the original receipt of purchase. In the event of any defects, please contact your dealer. If the dealer cannot deal with the complaint, the dealer will contact the manufacturer. Any repairs made to the stroller do not extend the warranty period.

Warranty is null and void when:

- ☹ the product is returned without the original receipt of purchase
- ☹ defects and / or damages caused by improper use or by changes made by the consumer
- ☹ discolouring/circles occur, caused by washing, rain or sun
- ☹ wear and tear as a result of normal use
- ☹ defect is the result of using a standing board for a 2nd child

Accessories included

- ☹ Sun hood - offers protection from the sun's harmful rays. Use of sun hood pockets - maximum weight 1.5 kilograms/3lb.
- ☹ Mosquito net - (included with the cot) keeps mosquitoes and other insects away from your child. Attach it over the hood and at the foot end of the cot.
- ☹ Rain cover - (included with the stroller) protects your child against the rain and snow. Attach it over the hood and at the foot end of the seat. The cover is fitted with ventilation holes; nevertheless do not leave children under the rain cover when it is not needed, as heat will

develop under the cover.

Optional accessories

- ☹ Adaptors for various car seats (City Elite)
- ☹ Diaper bag with wet and dry compartments, includes change pad
- ☹ Parasol with flexible arm
- ☹ Sleeping bag with ventilation holes opens at the front and the side
- ☹ Cot inclusive mosquito net
- ☹ BuggyBoard™ (please check for more information www.lascal.se)
- ☹ Air pump
- ☹ Rain cover cot

Washing instructions



Check www.firstwheels.nl for color availability.

City Elite

Unfolding the City Elite

Unfolding the stroller - Illustration 1-3

The under-carriage is fitted with a safety pin for transportation. Unbolt it by turning the pin down. Turn the under- carriage upside down and unfold the stroller. Ensure that the plastic plates, both left and right, click firmly into place. The height of the push bar is adjustable by pushing the adjustment buttons, left and right, at the same time, allowing the lowering or raising of the bar.

Wheels - Illustration 4

Take the two big wheels and place one on each axle, making sure to simultaneously press the spring down. Check if the wheels are secure and check the tire pressure. If necessary, fill the tires with air with the optional Firstwheels pump. The maximum tire pressure is 28PSI (2.0 bar).

Brake Illustration 5 - 6

Pushing the lever down, in between the back wheels, activates the brake. To release the brake, pull the same lever up with your foot.

Stroller seat - Illustration 7

Make sure that the connecting piece of the seat fits exactly on the adaptor of the under-carriage and that it clicks firmly into place. The seat may be placed facing the front or the back.

Velcro - Illustration 8

For extra safety always make sure the Velcro straps at the top of the backrest are well connected around the frame.

5-point safety belt - Illustration 9

When placing children in the seat, ensure the brake is on. Fasten the shoulder straps to the hip belt; always double check if all safety belts are fastened.

Sun Hood - Illustration 10

When using the hood, ensure the plastic components of the hood are lined up with those of the seat. Ensure they click firmly into place.

Position of the seat - Illustration 11

The seat can be placed in 3 different reclining positions. Press the round buttons at both sides simultaneously to put the seat in the requested position.

Lockable front wheel - Illustration 12

Pull the locking handle up to lock the front wheels in position. The wheels are now locked in a straight position and the stroller will go in a straight line. Push the locking handle down to unlock the front wheels, the front wheels will now swivel again, making the stroller very easy to manoeuvre.

Use of cot (optional) - Illustration 13 - 15

Put both plastic sides of the travel cot in a vertical position. Turn the plastic components down at both sides. Pull at the loops on the bottom

of the cot, until you hear it click. Place the cot on the under-carriage and push downwards until it clicks into place. Push down at the foot end of the cot to lock into place.

Connecting the bumper bar - illustration 16

Ensure that the plastic components of the bumper bar are well connected on the seat and it clicks firmly into place.

Remove the bumper bar - Illustration 17 - 18

The bumper bar can be unfastened to allow easy access to the seat. Push in on the button at the side of the bumper bar; the bar can now be raised and rotated to allow access to the seat. When refastening the bumper bar, make sure that it clicks firmly into place.

Folding the City Elite

Taking the stroller apart - Illustration 1 - 5

Remove the seat including the hood from the under-carriage.

Folding the cot - Illustration 6-12

To disengage the cot, pull the lever under the cot towards you, uncoupling the cot. Then, simultaneously press the plastic knobs at the side to lift the cot from the under-carriage. Make sure both plastic sides of the cot are turned around a quarter turn and make sure the hood of the plastic components are pulled up. Pull the loops on the bottom of the cot to the centre. The cot can now be folded into a flat position.

Usage of cot without under-carriage

To use the cot without the under-carriage you have to make sure that both plastic parts of the cot are turned around until the cot is equal to the surface it stands on.

Folding the chassis - Illustration 13 - 15

Pull up on the safety pin at the right side of the frame and pull the folding mechanism at the same time with both index fingers than push the frame down to fold the under-carriage. Slide both the adjustment handles of the push bar down at the same time and push the push bar right down to the ground. Than make sure the transportation lock is secured.

City Twin

Unfolding the City Twin

Unfolding the stroller - Illustration 1-3

The under-carriage is fitted with a safety pin for transportation. To unbolt it, turn the pin down. Turn the under- carriage upside down and unfold the stroller. Ensure that the plastic plates, left and right, click firmly into place. The height of the push bar is adjustable by pushing the adjustment buttons, left and right, at the same time.

Wheels - Illustration 4 - 6

Take the two bigger wheels and place one on each axle, making sure to simultaneously press the spring down. Ensure the wheels are secure and check the tire pressure. If necessary, fill the tires with air with the op-

tional Firtwheels pump. The maximum tire pressure is 28PSI (2.0 bar). Take the two smaller front wheels and place one at each end of the plastic black part. Secure in place with the white plastic clip, cover this with the black cap till it clicks firmly into place.

Brake - Illustration 7-8

Pushing the lever down, in between the back wheels, activates the brake. To release the brake, pull the same lever up again with your foot.

Stroller seat - Illustration 9

Make sure the connecting piece of the seat fits exactly on the adaptor of the under-carriage and ensure it clicks firmly into place. The seat may be placed facing the front or the back.

Velcro - Illustration 10

For extra safety, make sure the Velcro straps of the backrest are well connected around the frame.

5-point safety-belt Illustration 11

When placing children in the seat, ensure the brake is on. Fasten the shoulder straps to the hip belt; always double check if all seatbelts are fastened.

Sun Hood-Illustration 12

When using the hood, ensure the plastic components of the hood are lined up with those of the seat. Ensure they click firmly into place.

Position of the seat - Illustration 13

The seat can be placed in 3 different reclining positions. Press the round buttons at both sides simultaneously to put the seat in the requested position.

Lockable front wheel - Illustration 14

Pull the locking handle up to lock the front wheels in position. The wheels are now locked in a straight position and the stroller will go in a straight line. Push the locking handle down to unlock the front wheels, the front wheels will now swivel again, making the stroller very easy to manoeuvre.

Use of cot (optional) - Illustration 15 - 17

Put both plastic sides of the travel cot in a vertical position. Turn the plastic components down at both sides. Pull at the loops on the bottom of the cot, until you hear it click. Place the cot on the under-carriage and push downwards until it clicks into place. Push down at the foot end of the cot to lock into place. The City Twin allows you to combine a seat and a cot at the same time.

Connecting the bumper bar - illustration 18

Ensure that the plastic components of the bumper bar are well connected on the seat and it clicks firmly into place.

Remove the bumper bar - Illustration 19 - 20

The bumper bar can be unfastened to allow easy access to the seat. Push in on the button at the side of the bumper bar; the bar can now be raised and rotated to allow access to the seat. When refastening the bumper bar, make sure that it clicks firmly into place.

Folding the City Twin

Taking the stroller apart - Illustration 1 - 9

Remove the seats including the hoods from the under- carriage.

Folding the cot - Illustration 10-12

To disengage the cot, pull the lever under the cot towards you, uncoupling the cot. Then, simultaneously press the plastic knobs at the side to lift the cot from the under-carriage. Make sure both plastic sides of the cot are turned around a quarter turn and make sure the hood of the plastic components are pulled up. Pull the loops on the bottom of the cot to the centre. The cot can now be folded into a flat position.

Usage of cot without under-carriage

To use the cot without the under-carriage you have to make sure that both plastic parts of the cot are turned around until the cot is equal to the surface it stands on.

Folding the chassis Illustration 13 - 15

Pull down the safety pin at the middle of the frame and pull the folding mechanism at the same time with both index fingers than push the frame down to fold the under-carriage. Slide both the adjustment handles of the push bar down at the same time and push the push bar right down to the ground. Than make sure the transportation lock is secured.